

# ACCUPARK®

## Parking Guide Installation

### Package Contents

#### SINGLE ACCUPARK SYSTEM:

- (1) AccuPark Diamond Plate Top
- (2) Black Floor Tiles
- (1) Non-Slip Rubber Mat

#### SINGLE ACCUPARK SYSTEM:

- (2) AccuPark Diamond Plate Tops
- (4) Black Floor Tiles
- (2) Non-Slip Rubber Mats

*Note: The AccuPark system is designed to integrate directly with any RaceDeck® modular garage surface. This system has also been designed to work for portable applications or over any garage flooring surface with the use of our anti-slip mat feature. The components for both methods of installation have been provided in every kit and will be covered in this instruction sheet.*

### Installation Instructions

#### INSTALLING INTO A RACEDECK GARAGE FLOOR:

1. Mark the location(s) of the front of the tire(s) of the vehicle where it will be parked in the garage.
2. Begin installing RaceDeck flooring system to the pre-approved layout per most recent installation methods and procedures.
3. Install the two black floor tiles with the loops in the same direction as the RaceDeck garage tile in the area(s) previously marked in **Step 1**. Refer to **Illustration A** below for detail.

*Note: The AccuPark system should be perpendicular to the garage entrance.*

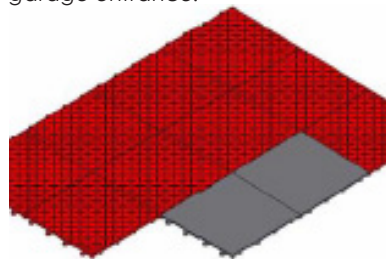


Illustration A

4. Continue installing the RaceDeck garage surface to the pre-approved layout. If additional AccuPark systems are required, install the black floor tile in the same manner previously mentioned in their appropriate locations. Wipe off the black floor tiles with a clean towel to remove any dust or debris.
5. With the RaceDeck garage surface and black floor tile installed and cleaned, remove the protective film on the underside of the AccuPark diamond plate top and place squarely over the black floor tiles. Press down on the plate firmly to ensure a proper bond. Allow the adhesive to set for at least 2 hours before use. Repeat process for any additional AccuPark units. Refer to **Illustration B** below for detail.

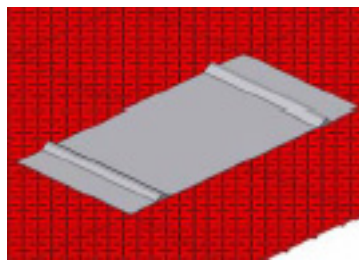


Illustration B

#### INSTALLATION FOR PORTABLE USE OR GENERIC FLOORING:

1. Remove the protective film on the underside of the AccuPark diamond plate top and place squarely over the black non-slip rubber mat. Press down on the plate firmly to ensure a proper bond. Allow the adhesive to set for at least 2 hours before use. Refer to **Illustration C** below for detail.

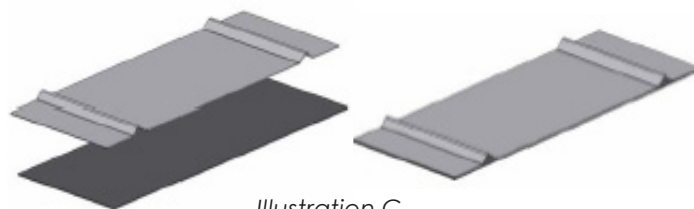


Illustration C



1-800-457-0174 | [www.racedeck.com](http://www.racedeck.com)  
2330 California Ave. Salt Lake City, UT 84104